



# Chase 3 Wheeler Pramette

Instruction Manual

**IMPORTANT** PLEASE READ THESE INSTRUCTIONS  
CAREFULLY BEFORE USING THIS PRODUCT  
KEEP FOR FUTURE REFERENCE

Thank you for choosing Obaby. To ensure that your pramette is used in accordance with these instructions, please read them fully. This pramette conforms to EN 1888:2003 and is guaranteed for 12 months from the date of purchase against manufacturing defects. If, however you have any problems, please contact your Obaby retailer from whom you purchased your product, who will take appropriate action.

Your child's safety may be affected if you do not follow these instructions.

- ⚠ **WARNING:** A child's safety is your responsibility
- ⚠ **WARNING:** Ensure that all locking devices are engaged before use
- ⚠ **WARNING:** Children should be harnessed in at all times
- ⚠ **WARNING:** Always use the crotch strap in combination with the waist belt
- ⚠ **WARNING:** Any load attached to the handles affects the stability of the pram / pushchair
- ⚠ **WARNING:** This product is not suitable for running or skating
- ⚠ **WARNING:** It may be dangerous to leave your child unattended
- ⚠ **WARNING:** The child should be clear of moving parts while making adjustments or opening or folding the pramette. Risk of serious injury (entrapment, laceration or amputation) exists
- ⚠ **WARNING:** Do not use this product as a bed, your child may become tangled in straps and suffocate
- ⚠ **WARNING:** Check that the pram body or seat unit are correctly engaged before use
- ⚠ **WARNING:** Do not use the pramette if any part is broken, torn or missing and use only spare parts approved by the manufacturer
- ⚠ **WARNING:** Do not add a mattress thicker than 30mm
- A basket is provided for the carriage of other items up to a maximum permissible weight of 3 kg. Where a hood parent pocket is provided, an additional 1kg maximum permissible weight can be used within this
- This pramette is intended to carry one child from birth and up to a maximum weight of 15kg

#### ROUTINE CARE & MAINTENANCE

- This pramette requires regular maintenance by the user
- It may be unsafe to use replacement parts or accessories e.g. child seats, bag hooks, rain covers, etc, other than those approved by the manufacturer or distributor.
- For cleaning, use only a mild detergent and warm water
- **DO NOT USE BLEACH**
- **DO NOT USE** any abrasive substances
- From time to time, check your pramette for loose screws, worn parts, torn material or stitching. Replace or adjust the parts as needed.

Due to constant updating and improvements, some components may occasionally differ slightly from the images shown in these instructions. We reserve the rights to change the specifications of any products without prior notice. If you need any assistance please contact your Obaby retailer from whom you purchased your product, who will take appropriate action.





fig. 1

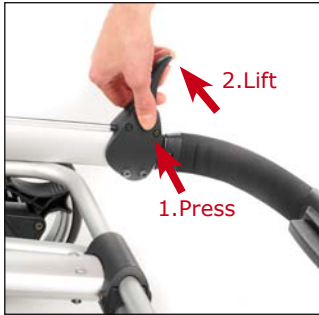


fig. 2



fig. 3



fig. 4

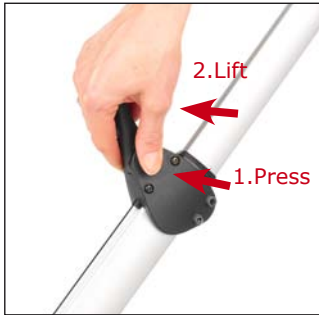


fig. 5



fig. 6

To unfold your pramette, release the primary lock by pressing the button on the right side of the frame. While keeping this button pressed, release the secondary lock by lifting the lever (fig.1 & 2).

Lift the handle up away from the wheels (fig.3) until it clicks into place (fig.4).

To fold your pramette, release the primary lock by pressing the button on the right side of the frame. While keeping this button pressed, release the secondary lock by lifting the lever (fig.5). Lower the handle towards the wheels (fig.6).

The wheels can be removed if you wish (see page 5 for details).



**WARNING:** Ensure that all locking devices are engaged before use



fig. 7

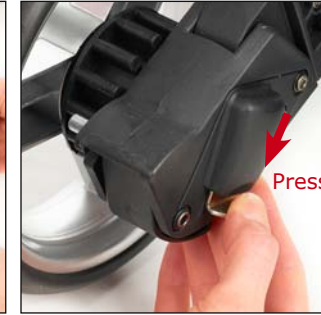


fig. 8



fig. 9



fig. 10



fig. 11



fig. 12

To fit the rear wheels, slide the wheel shaft into the hole on the frame, until they click into place (fig.7).

To remove the rear wheels, press the lever on the inside of the wheel mount (fig.8) and simply slide the wheel out (fig.9).

To fit the front wheels, simply slide each wheel shaft into the receivers on the front of the frame (fig.10) until they click into place (fig.11).

To remove the front wheels, press the button on the top above each wheel (fig.12) and pull away from the frame.





fig. 13



fig. 14



fig. 15

To lock the swivel wheel, lift the lever up on the front of the wheel (fig.13).

To put the wheel in swivel mode, push the lever down (fig.14 & 15).



fig. 19



fig. 20



fig. 21

To adjust the handle, press the button on the top of the handle (fig 19), then lift or lower the handle to the required position and release the button. The handle should click into place (fig.20 & 21).

## Applying the Brake



fig. 16



fig. 17



fig. 18

To lock the brake, push down on the brake lever using your foot (fig.16 & 17).

To release the brake, lift the brake lever using your foot (fig.18).

## Fitting and Removing the Bumper



fig. 22

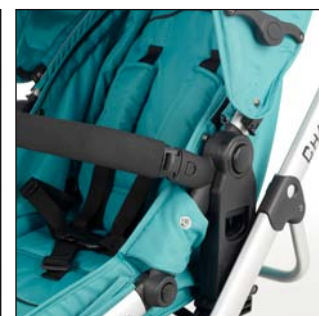


fig. 23



fig. 24

To fit the bumper, slide the bumper into the receivers on either side of the chassis (fig.22) until it clicks into place (fig.23).

To remove the bumper, simply press the button on either side of the chassis and remove the bumper (fig.24).



fig. 25



fig. 26



fig. 27



fig. 28

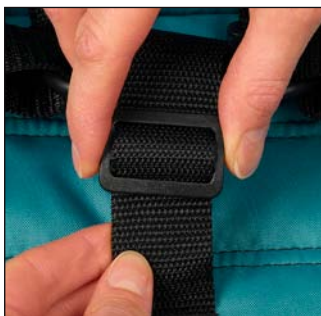


fig. 29

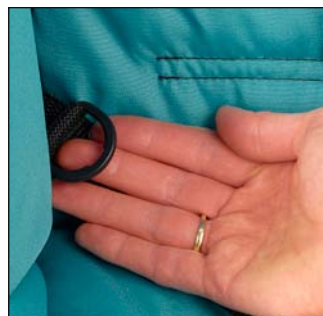


fig. 30

To fasten the harness, insert each waist strap fastener through the loop on each chest strap (fig.25). Then insert both waist strap fasteners into the clasp on the crotch strap (fig.26 & 27).

To release the harness, squeeze each of each clips in the centre of the harness and pull away from the clasp, one at a time (fig.28).

Adjust the harness length using the buckles on each strap (fig.29).

#### 'D' Ring

The 'D' rings highlighted are provided for fitting a separate harness complying with BS 6684 (fig.30).

**WARNING:** Always use the crotch strap in combination with the waist belt

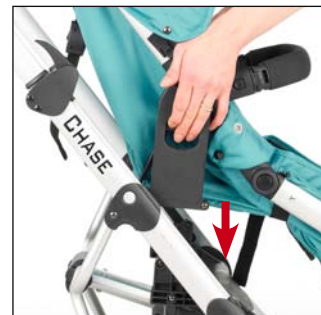


fig. 31



fig. 32

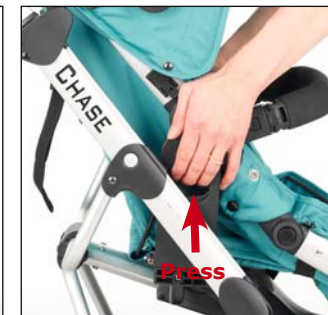


fig. 33

The seat unit can face either forwards or backwards.

To put the seat unit onto the chassis, line up the seat coupler with the chassis fittings on each side and lower onto the chassis (fig.31), ensure it clicks into place on both sides (fig.32).

To remove the seat from the chassis, press both release buttons on each side of the seat unit (fig.33) and lift the seat up, away from the chassis.

**WARNING:** Ensure that all locking devices are engaged before use

### Adjusting the Backrest



fig. 34



fig. 35



fig. 36

To recline the backrest, press the button on the toggle and pull away from the seat to the desired height (fig.34). Lower the seat to rest on the toggle (fig.35).

To put upright, grip the sides of the toggle with one hand, and the strap with the other hand and slide the toggle up the strap to the desired height (fig.36).





fig. 37



fig. 38



fig. 39

To fit the hood, place the hood on the chassis, in line with the seat unit. Slide the hood catches onto each side of the chassis (fig.37 & 38).

To remove the hood, lift the lever on each side of the hood and slide the hood off the chassis (fig.39).



fig. 43



fig. 44

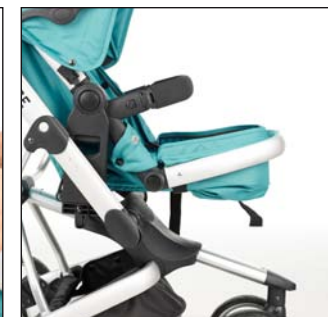


fig. 45

To adjust the calf rest press the buttons either side of the seat and lift or lower to the required position (fig.43-45).

## Adjusting the Hood



fig. 40

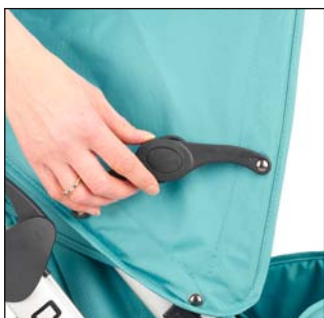


fig. 41



fig. 42

To fold the hood, lift the hood adjusters up on both sides of the hood, as shown above.

## Using the Raincover



fig. 46

To fit the raincover, simply place the raincover over the seat and tuck under the foot rest.

**WARNING:** When using the raincover, regularly check your child has adequate ventilation and is not overheating. Unless it is raining, the raincover should be removed.



fig. 47



fig. 48



fig. 49



fig. 50



fig. 51



fig. 52

To convert the stroller into the pram, first recline the backrest (fig.47) (see page 9 for details).

Then press the buttons on either side of the seat unit (fig.48) and tilt the seat until it is flat (fig.49).

Unclip the clasps behind the footrest, then push the footrest down until it is flat (fig.50 & 51).

Remove the bumper bar (see page 7 for details) and add the carrycot liner and apron if required.

The seat unit can also be turned around to face the opposite direction (see page 9 for details).



fig. 53

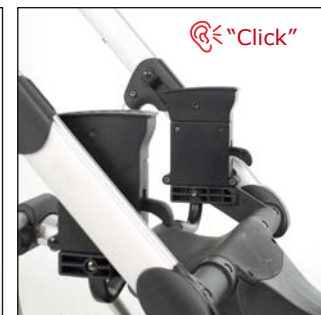


fig. 54



fig. 55



fig. 56



fig. 57



fig. 58

To put the car seat onto the chassis, first remove the stroller seat unit (see page 9 for details).

Then fit the car seat adaptors to the chassis (fig.53 & 54) ensure the release levers are towards the front wheels.

Lower the car seat onto the adaptors (fig.55), ensure it clicks into place on both sides (fig.56).

To remove the car seat from the chassis, either press the release buttons on either side of the car seat and lift the car seat up, away from the adaptors (fig.57), or press the release buttons on either side of the car seat adaptors and lift the car seat and adaptors up, away from the chassis (fig.58).

**WARNING:** Ensure that all locking devices are engaged before use

