


Owner's Manual


BabyBjörn® Baby Carrier Active



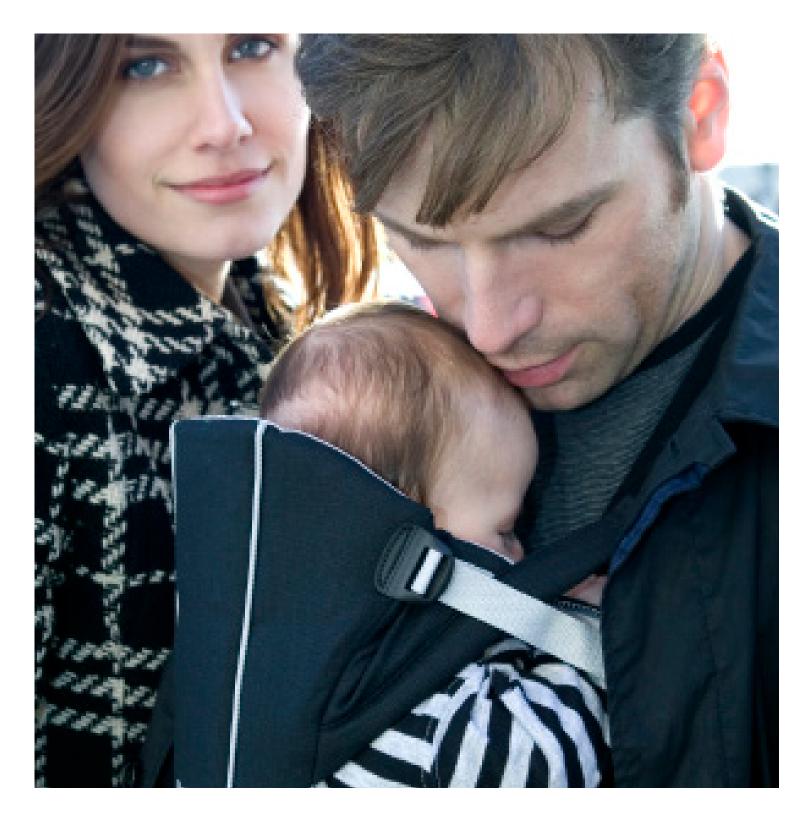

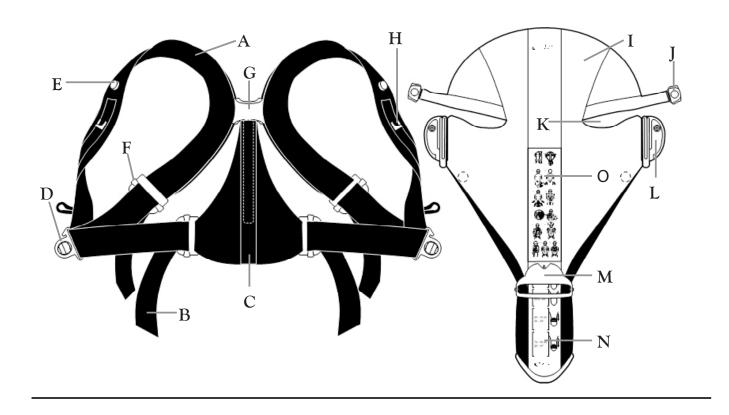

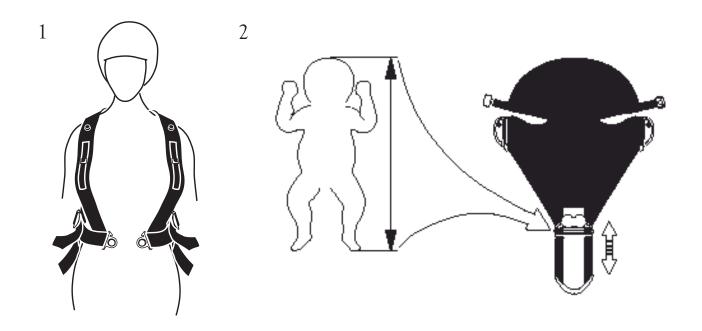

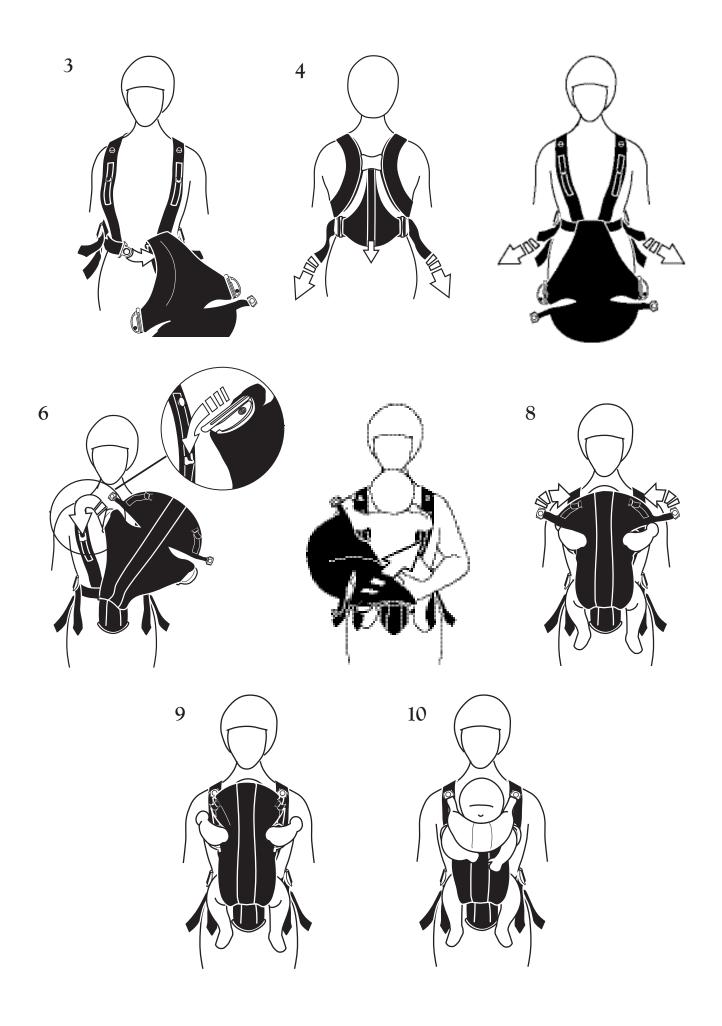

IMPORTANT!

Read this manual carefully before use. Keep it for future reference.

Requirements

Minimum requirements: 3,5 kg (8 lb) and 53 cm (21")

Maximum weight: 12 kg (26 lb)

Technical information

Material: 60% cotton 40% Polyester

Lining: 100% cotton

Washing instruction

Wash separately



Parts of the BabyBjörn Baby Carrier Active

Please refer to this diagram when reading the instructions.

Straps (seen from behind)

A. Straps

B. Strap for lumbar support

C. Lumbar support

D. Sliding buckle clip

E. Head support knob

F. Strap buckle

G Sliding lumbar support buckle

H. Side latch groove

Front piece (seen from the inside)

- I. Head support
- J. Head support buckle
- K. Armhole
- L. Side latch
- M. Sliding buckle
- N. Adjustment label
- O. Instruction label

For use with newborn babies

- 1. Start by pulling the straps into their fully extended position. Put on the straps, place the lumbar support in the lumbar region with the two sliding buckle clips pointing downwards.
- 2. Adjust the position of the sliding buckle to your child's height. Follow the directions on the on the adjustment label to ensure that the child is safe and comfortable in the carrier.
- 3. Fasten the carrier's front piece to the straps by inserting the straps' sliding buckle clips into the sliding buckle on the front piece.
- 4. Adjust the straps and lumbar support so that the latter is in the designated position and all the settings feel comfortable. Adjust the straps on the lumbar support by pulling them downwards and forwards at a slight angle. (These are the straps with the horizontal edge found at the lower edge of the carrier.) USEFUL TIP! It is important to adjust the lumbar support straps first to ensure that the baby carrier is comfortable.
- 5. Adjust the straps so that the baby carrier is comfortable. Wear it close to your body (see diagram). (These are the straps with the triangular edge found above the lower back support straps.)
- 6. Insert one of the color-coded side latches on the front piece into the side latch groove of the same color on the straps until it clicks. USEFUL TIP! If you angle the side latch slightly, it is easier to fit it into the side latch groove.
- 7. Now place your child in the baby carrier via the side that is open, with the child's face towards you. HOLD YOUR CHILD SECURELY UNTIL THE FRONT PIECE IS FULLY AND CORRECTLY FASTENED TO THE STRAPS. CHECK THAT THE CHILD HAS ONE LEG ON EITHER SIDE AND ONE ARM IN EACH ARMHOLE. Fasten the second color-coded side latch to the straps (see above, point 6).

8-9. Fasten the head support buckles <u>above the child's shoulders</u>. Place your thumb behind one of the head support knobs on the straps and press it onto the head support buckle until it clicks. Repeat on the opposite side. Adjust the head support by carefully pulling the head support strap. CHECK THAT YOUR CHILD HAS SUFFICIENT ROOM AROUND HIS HEAD TO ALLOW THE FREE PASSAGE OF AIR.

Attach the Leg Strap to the Leg Strap Button (BOTH SIDES!). Leg Straps must be used for infants between 8-11 pounds / 3,5 - 4,5 kg.

For use with older infants

Once your child is strong enough to hold its head up without support, he or she may find it more fun to face forwards.

- I. Follow points 1-6 above.
- II. Place your child in the baby carrier facing outwards. Fold the head support down. Fasten the head support buckle above the child's shoulders on either side (see above under point 8-9). The head support buckles will now be reversed compared with when the child is facing you. Please note that the child's arms must be placed under the folded head support, since this then doubles as a safety belt and keeps the child's center of gravity closer to the bearer, thus ensuring maximum carrying comfort.

Removing the child from the BABYBJÖRN Baby Carrier Active

HOLD YOUR CHILD SECURELY AT ALL TIMES

- I. Unfasten the head support on both sides (place your thumb or index finger on the buckle, press and lift from knob).
- II. Unfasten the side latch on one or both sides (place your thumb on the ridged surface behind the side latch groove, press and pull upwards). If your child is asleep, unfasten both sides. Let the front piece fall forward.
- III. Remove the front piece from the straps by pressing the sliding buckle clips and removing them from the sliding buckle.

△ WARNING

When using this baby carrier, please be aware of the following:

- This baby carrier is designed for use by adults only.
- This baby carrier should only be used when walking, sitting or standing.
- This baby carrier is not suitable for use during sporting activities.
- Your balance may be adversely affected by your movement and that of your child.
- Take care when bending or leaning forward. Do not bend at waist when stooping down; bend at knees to ensure that the baby remains safely in the baby carrier.
- Always adjust the baby carrier to the child's size.
- Always make sure there is enough room around your baby's face to provide good air-flow.
- Avoid dressing your child too warm and check regularly to make sure that the child maintains a comfortable temperature.
- Do not use this baby carrier unless all buckles, clips, latches, knobs and straps are securely fastened.
- Do not use this baby carrier if damaged.